



# LOST+ WANDER

## How to set up

How to set up a Lost + Wander Glamping Bell Tent

1. Roll and fold out tent, find the door and position that when you want the entrance.
2. Unpack the poles and pegs ready. You should have
  - 1 x Centre pole
  - 1 x A-frame door pole
  - 13 x tent pegs
  - 13 x guy rope pegs (triangle shape)
3. Start with the tent pegs, hammer peg into rings attached to base of tent. Starting with the 2 either side of the door frame. Next 2 opposite the door so the back of tent. This helps tighten the floor ready for the side pegs. Each peg pull tent before hammering in the peg.
4. Next is the center pole. Unzip door frame and with the center pole erected step inside and find the center of the ceiling. It has a patch so you should easily find it. Place one end of the center pole on this patch and push pole into position. Ensure the pole is central and straight.
5. Take door poles, inside tent and set up poles in there (easy to install that way) Once inside the tent place the top of frame into hole at the center of the door opening, while the bottom of frame goes into slots on the tent floor.
6. Zip door back up (makes the next part easy)
7. Now set up each guide rope by using the triangle pegs. Make sure the black slip is  $\frac{3}{4}$  up the rope and that's where you hammer it in. once hammered in tighten the guide roles.
8. Finally, slips the band over each peg to secure it
9. Enjoy 😊